1 Features

- Slim unit with super silent and greater air flow
- Ideal for shops, restaurants or offices requiring maximum floor space for furniture, decorations and fittings
- Can be installed in both new and existing buildings.
- Compact casing (only 960 to 1,590mm width).
- Extremely quiet in operation
- Auto-swing function ensures efficient air and temperature distribution.
- Air flow distribution for ceiling heights up to 3.8m without loss of capacity.
- Up to 4 indoor units can be connected to 1 Multi outdoor unit. All indoor units are individually controllable with remote control and do not need to be installed in the same room or at the same time. They operate simultaneously within the same cooling operation
- Daikin remote controls give you easy control at your fingertips.
- The wired remote control provides you with a schedule timer, enabling to program the air conditioning daily or weekly.
- The optional remote ON/OFF enables you to start/stop the air conditioning from a mobile phone via a telephone remote control (field supply).
- The optional forced OFF enables you to switch off the unit automatically. E.g. when a window is opened, the unit switches off.
- The 'home leave' operation button prevents large temperature differences by continuously operating at a minimum (heating mode) or maximum (cooling mode) preset level while you're out or sleeping. It also allows the indoor temperature to return quickly to your favourite comfort level.

heat pump

2 steps

optional

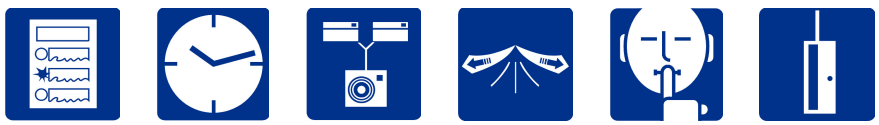

35~60

optional

2 Specifications

2-1 FOR INDOOR UNITS ONLY			FHQ35BVV1B	FHQ50BVV1B	FHQ60BVV1B	FHQ71BVV1B	FHQ100BW1B	FHQ125BVV1B
Nominal Input	Cooling	kW	0.111	0.111	0.115	0.117	0.135	0.144

2-2 TECHNICAL SPECIFICATIONS				FHQ35BVV1B	FHQ50BVV1B	FHQ60BVV1B	FHQ71BVV1B	FHQ100BW1B	FHQ125BVV1B
Casing	Colour			White					
Dimensions	Packing	Height	mm	279	279	279	279	275	275
		Width	mm	1046	1046	1246	1246	1486	1676
		Depth	mm	818	818	818	818	818	818
	Unit	Height	mm	195	195	195	195	195	195
		Width	mm	960	960	1160	1160	1400	1590
		Depth	mm	680	680	680	680	680	680
Weight	Unit		kg	24.0	25.0	27.0	27.0	32.0	35.0
	Packed Unit		kg	31.0	32.0	35.0	35.0	41.0	45.0
Heat Exchanger	Dimensions	Length	mm	722	722	922	922	1162	1352
		Nr of Rows		2	3	2	3	3	3
		Fin Pitch	mm	1.75	1.75	1.75	1.75	1.75	1.75
		Nr of Passes		6	6	6	6	11	11
		Face Area	m^2	0.182	0.182	0.233	0.233	0.293	0.341
		Nr of Stages		12	12	12	12	12	12
		Empty Tubeplate Hole			2				
	Tube type			N-Hix					
	Fin	Type		ML fin (Multi louver)					
Fan	Type			Sirocco fan					
	Quantity			3	3	4	4	3	4
Air Flow Rate	Cooling	High	m^3/min	13.0	13.0	17.0	17.0	24.0	30.0
		Low	m^3/min	10.0	10.0	13.0	14.0	20.0	25.0
	Heating	High	m^3/min	13.0	13.0	16.0	17.0	24.0	30.0
		Low	m^3/min	10.0	10.0	13.0	14.0	20.0	25.0
Fan	Motor	Quantity		1	1	1	1	1	1
		Model		3D12K1AA1	3D12K1AA1	4D12K1AA1	4D12K1AA1	3D12K2AA1	4D12K2AA1
		Number of steps		2	2	2	2	2	2
		Output (high)	W	62	62	62	62	130	130
Cooling	Sound Power	High	dBA	53.0	54.0	55.0	55.0	58.0	60.0
		Low	dBA	48.0	49.0	49.0	51.0	53.0	55.0
	Sound Pressure	High	dBA	37.0	38.0	39.0	39.0	42.0	44.0
		Low	dBA	32.0	33.0	33.0	35.0	37.0	39.0
Heating	Sound Power	High	dBA	53.0	54.0	55.0	55.0	58.0	60.0
		Low	dBA	48.0	49.0	49.0	51.0	53.0	55.0
	Sound Pressure	High	dBA	37.0	38.0	39.0	39.0	42.0	44.0
		Low	dBA	32.0	33.0	33.0	35.0	37.0	39.0
Refrigerant	Type			R-410A					
Piping connections	Liquid (OD)	Type		Flare connection					
		Diameter (OD)	mm	6.4	6.4	6.4	9.5	9.5	9.5
	Gas	Type		Flare connection					
		Diameter (OD)	mm	9.5	12.7	12.7	15.9	15.9	15.9
	Drain	Diameter (OD)	mm	VP20 (I.D. 20/O.D. 26)					
	Heat Insulation			Foamed polystyrene/polyethylene					
Safety Devices				Fuse	Fuse	Fuse			
				Fan motor thermal protector					

2 Specifications

2-2 TECHNICAL SPECIFICATIONS		FHQ35BVV1B	FHQ50BVV1B	FHQ60BVV1B	FHQ71BVV1B	FHQ100BVV1B	FHQ125BW1B
Standard Accessories	Item	Installation and operation manual					
	Quantity	1	1	1	1	1	1
	Item	Paper pattern for installation					
		Drain hose					
		Clamp metal					
		Insulation for fitting					
		Sealing pad					
		Clamps					
		Washer for hanger bracket					

2-3 ELECTRICAL SPECIFICATIONS			FHQ35BVV1B	FHQ50BVV1B	FHQ60BVV1B	FHQ71BVV1B	FHQ100BVV1B	FHQ125BW1B
Power Supply	Name		V1					
	Phase		1	1	1	1	1	1
	Frequency	Hz	50	50	50	50	50	50
	Voltage	V	220-240					
Power Supply Intake			Outdoor unit only					

3 Safety device settings

FHQ35~60B

Model	Safety devices	35	50	60
FHQ-B	Fuse	250V 5A	250V 5A	250V 5A
	Fan motor thermal protector (°C)	Off: 130 ±5 On: 83 ±20	Off: 130 ±5 On: 83 ±20	Off: 130 ±5 On: 83 ±20

3D006611M

4 Options

Name of option	Remark		FHQ~B		
			71	100	125
Replacement long-life filter			KAF501DA80	KAF501DA112	KAF501DA160
Drain up kit			KDU50N125VE		
L-type piping kit (for upward direction)			KHFP5MA160		
Remote control	Wired type		BRC1D528		
	Infrared type	For Heat pump	BRC7EA63W		
		For cooling only	BRC7EA66		
Central remote control			DCS302CA51		
Unified ON/OFF control			DCS301BA51		
Schedule timer			DST301BA51		
Adapter for wiring			KRP1BA54		
Wiring adapter for electrical appendices *1			KRP4AA52		
Interface adapter for Sky Air series			DTA112BA51		
Installation box for adapter PCB			KRP1CA93		
Remote sensor			KRCS01-1A		
Connector for forced on, forced off			EKRORO A		
Electrical box with earth terminal (3 blocks)			KJB311AA		
Electrical box with earth terminal (2 blocks)			KJB212AA		

3D044485B

NOTE: *1: Installation box for adapter PCB (KRP1CA93) is necessary

4 Options

FHQ35~60B

Name of option			FHQ~B		
			35	50	60
Replacement long-life filter			KAFJ501DA56		KAFJ501DA80
Drain up kit			KDU50N60VE		
L-type piping kit (for upward direction)			KHFP5MA35	KHFP5MA63	
Remote control	Wired type		BRC1D528		
	Infrared type	Heat pump	BRC7EA63W		
		Cooling only	BRC7EA66		
Central remote control			DCS302CA51		
Unified ON/OFF control			DCS301BA51		
Schedule timer			DST301BA51		
Adapter for wiring			KRP1BA54		
Wiring adapter (hour meter)			EKRP1B2A		
Adaptor for external ON/OFF and monitoring ※1			KRP4AA52		
Interface adapter for Sky Air series			DTA112BA51		
Installation box for adapter PCB			KRP1CA93		
Remote ON/OFF, forced OFF			EKRORQA		

3D038056

Note ※1: Installation box for adapter PCB (KRP1CA93) is necessary.

5 Control systems

BRC1D52

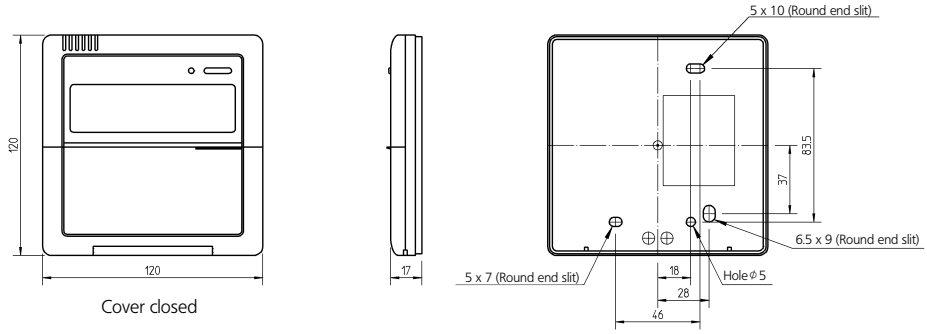

Cover closed

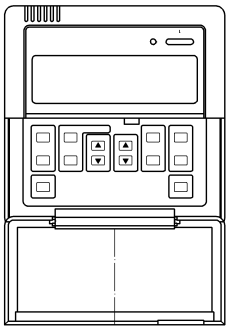

Cover open

3TW23651-2

6 Dimensional drawing & centre of gravity

6 - 1 Dimensional drawing

FHQ35B

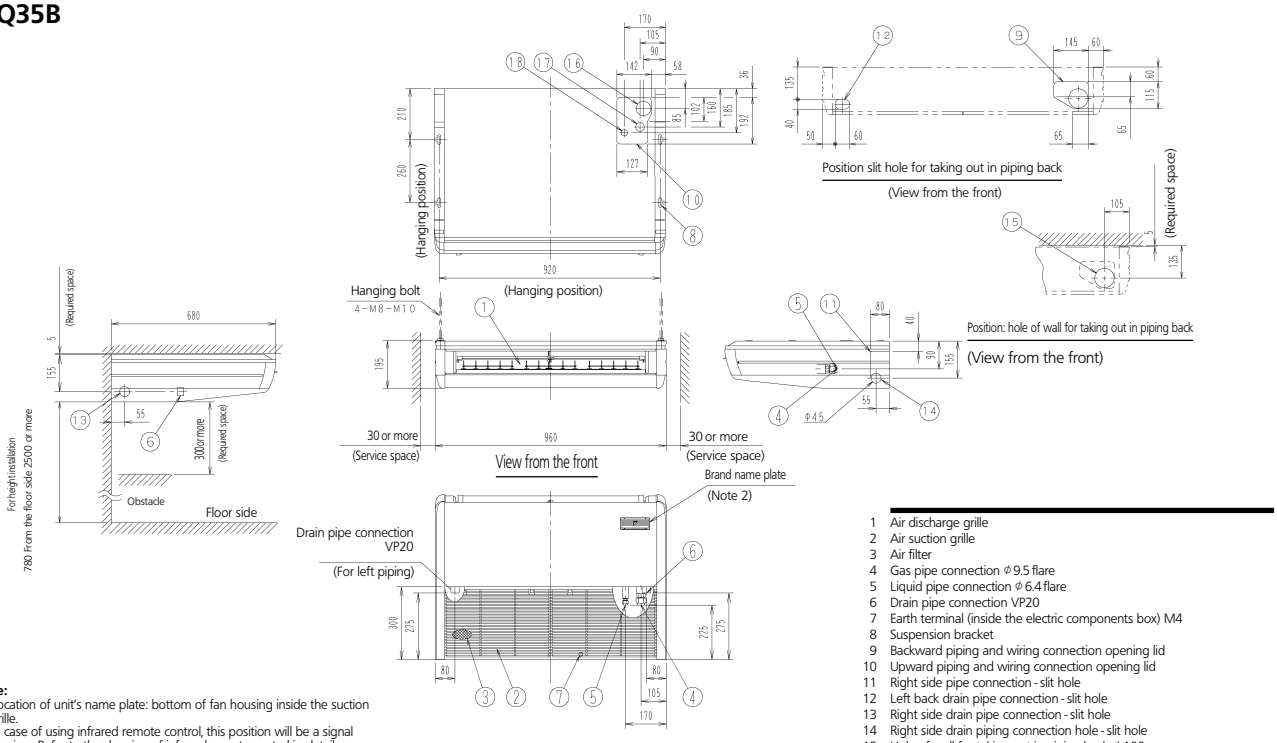

Note:
1. Location of unit's name plate: bottom of fan housing inside the suction grille.
2. In case of using infrared remote control, this position will be a signal receiver. Refer to the drawing of infrared remote control in detail.
3. The remote control code is the standard (about 3m outside the machine) attached.
   ($0.5\ mm^2$ x 2 Wicks x O.D. Φ5.4)

1 Air discharge grille
2 Air suction grille
3 Air filter
4 Gas pipe connection Φ9.5 flare
5 Liquid pipe connection Φ6.4 flare
6 Drain pipe connection VP20
7 Earth terminal (inside the electric components box) M4
8 Suspension bracket
9 Backward piping and wiring connection opening lid
10 Upward piping and wiring connection opening lid
11 Right side pipe connection - slit hole
12 Left back drain pipe connection - slit hole
13 Right side drain pipe connection - slit hole
14 Right side drain piping connection hole - slit hole
15 Hole of wall for taking out in piping back Φ100
16 Upward drain pipe connection Φ60
17 Upward gas pipe connection Φ36
18 Upward liquid pipe connection Φ26

3D037996A

FHQ50B

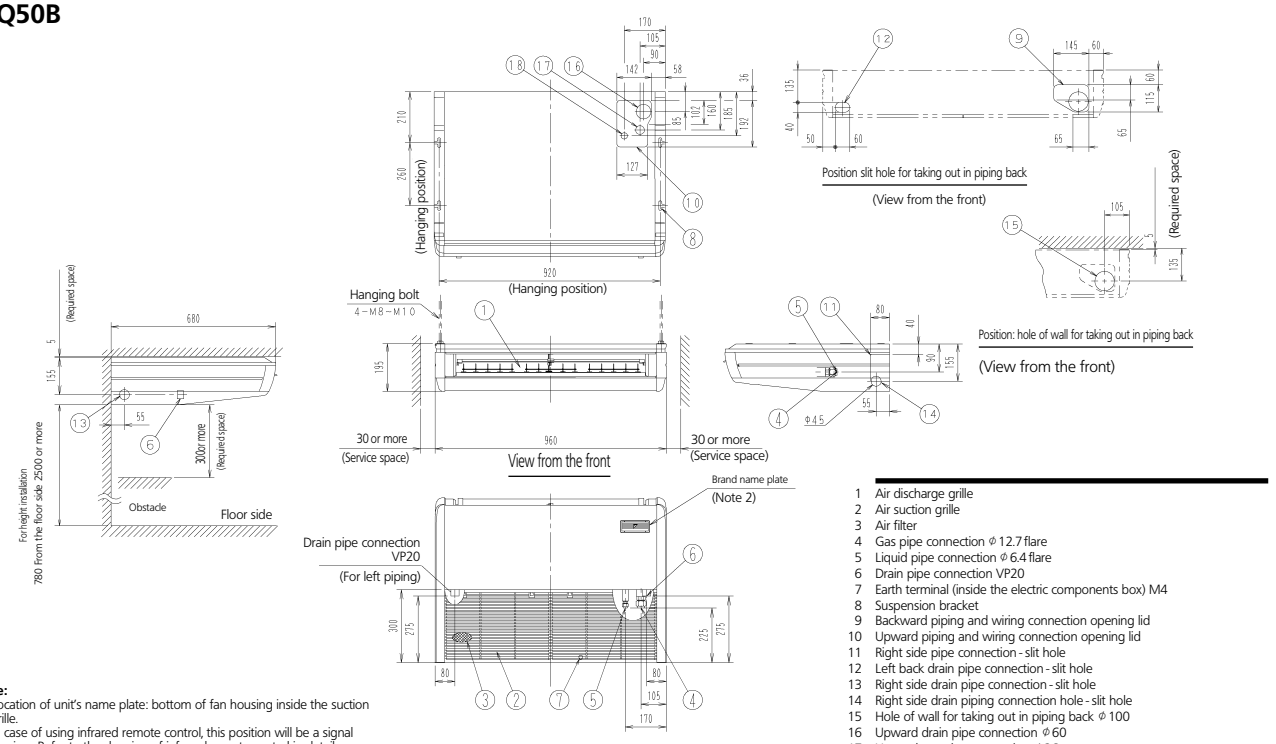

Note:
1. Location of unit's name plate: bottom of fan housing inside the suction grille.
2. In case of using infrared remote control, this position will be a signal receiver. Refer to the drawing of infrared remote control in detail.
3. The remote control code is the standard (about 3m outside the machine) attached.
   ($0.5\ mm^2$ x 2 Wicks x O.D. Φ5.4)

1 Air discharge grille
2 Air suction grille
3 Air filter
4 Gas pipe connection Φ12.7 flare
5 Liquid pipe connection Φ6.4 flare
6 Drain pipe connection VP20
7 Earth terminal (inside the electric components box) M4
8 Suspension bracket
9 Backward piping and wiring connection opening lid
10 Upward piping and wiring connection opening lid
11 Right side pipe connection - slit hole
12 Left back drain pipe connection - slit hole
13 Right side drain pipe connection - slit hole
14 Right side drain piping connection hole - slit hole
15 Hole of wall for taking out in piping back Φ100
16 Upward drain pipe connection Φ60
17 Upward gas pipe connection Φ36
18 Upward liquid pipe connection Φ26

3D027536D

6 Dimensional drawing & centre of gravity

6 - 1 Dimensional drawing

FHQ60B

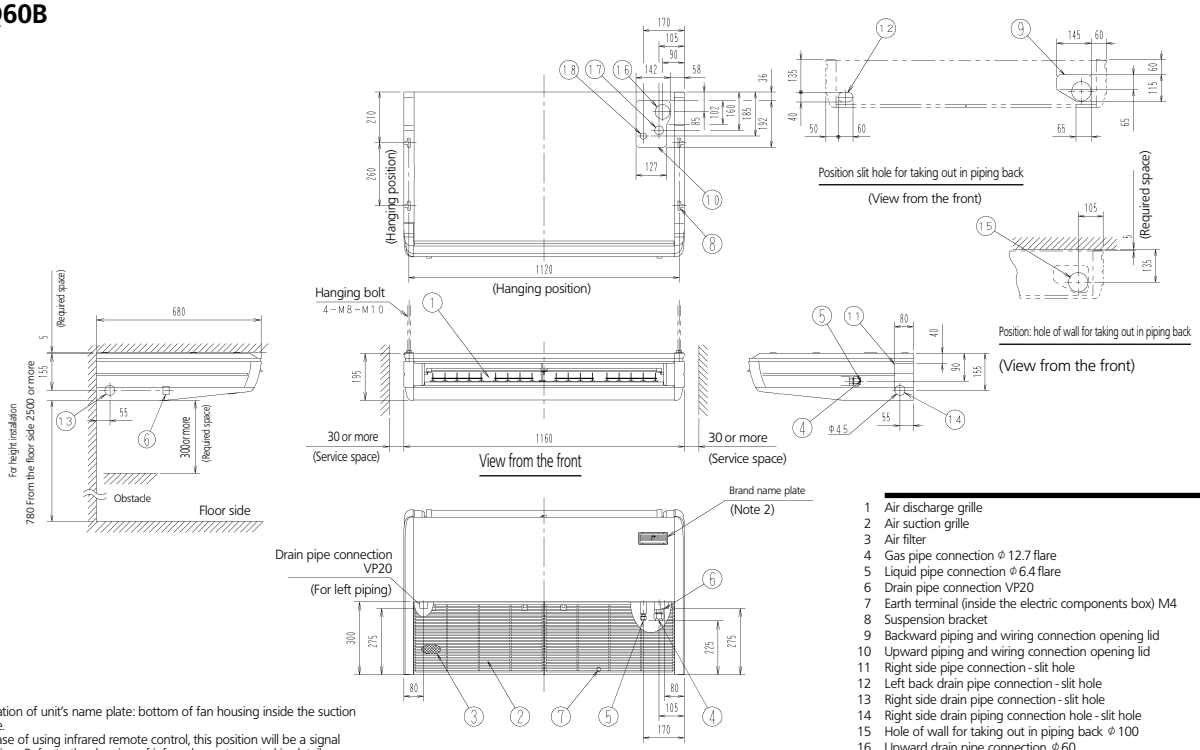

Note:
1. Location of unit's name plate: bottom of fan housing inside the suction grille.
2. In case of using infrared remote control, this position will be a signal receiver. Refer to the drawing of infrared remote control in detail.
3. The remote control code is the standard (about 3m outside the machine) attached.
   (0.5 mm² x 2 Wicks x O.D. Φ 5.4)

1 Air discharge grille
2 Air suction grille
3 Air filter
4 Gas pipe connection Φ 12.7 flare
5 Liquid pipe connection Φ 6.4 flare
6 Drain pipe connection VP20
7 Earth terminal (inside the electric components box) M4
8 Suspension bracket
9 Backward piping and wiring connection opening lid
10 Upward piping and wiring connection opening lid
11 Right side pipe connection - slit hole
12 Left back drain pipe connection - slit hole
13 Right side drain pipe connection - slit hole
14 Right side drain piping connection hole - slit hole
15 Hole of wall for taking out in piping back Φ 100
16 Upward drain pipe connection Φ 60
17 Upward gas pipe connection Φ 36
18 Upward liquid pipe connection Φ 26

3D037994A

FHQ71B

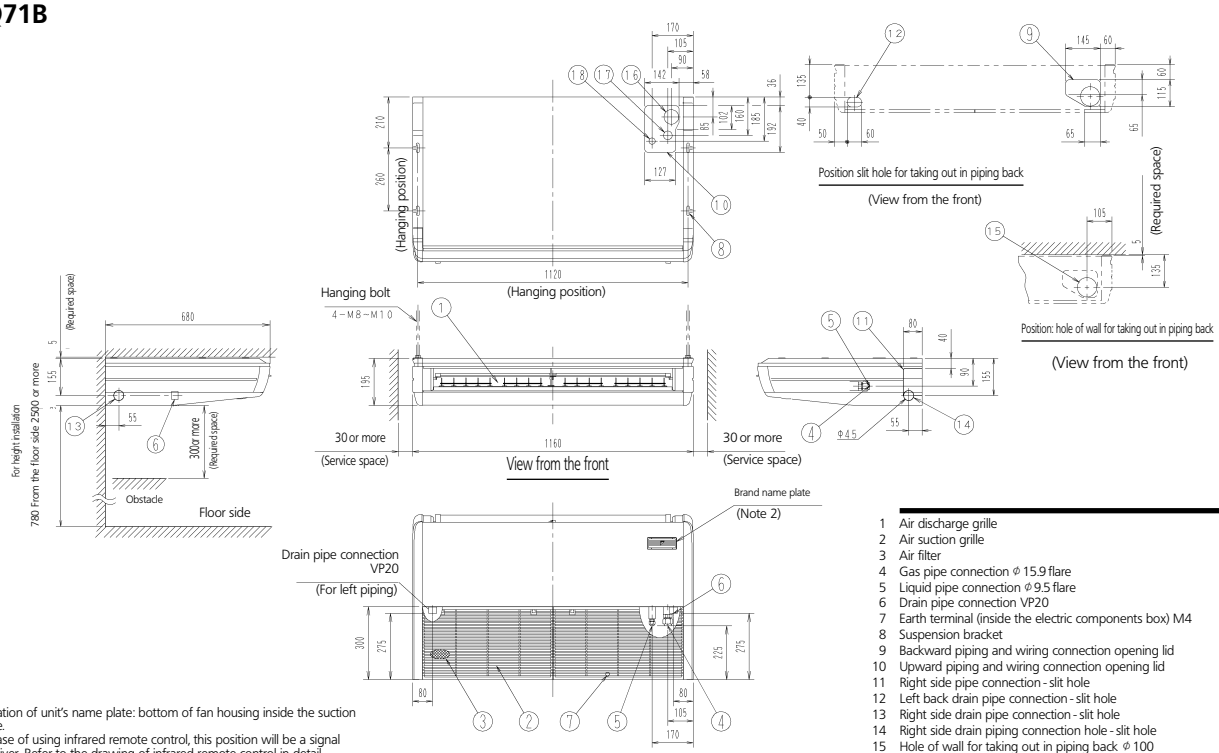

Note:
1. Location of unit's name plate: bottom of fan housing inside the suction grille.
2. In case of using infrared remote control, this position will be a signal receiver. Refer to the drawing of infrared remote control in detail.
3. The remote control code is the standard (about 3m outside the machine) attached.
   (0.5 mm² x 2 Wicks x O.D. Φ 5.4)

1 Air discharge grille
2 Air suction grille
3 Air filter
4 Gas pipe connection Φ 15.9 flare
5 Liquid pipe connection Φ 9.5 flare
6 Drain pipe connection VP20
7 Earth terminal (inside the electric components box) M4
8 Suspension bracket
9 Backward piping and wiring connection opening lid
10 Upward piping and wiring connection opening lid
11 Right side pipe connection - slit hole
12 Left back drain pipe connection - slit hole
13 Right side drain pipe connection - slit hole
14 Right side drain piping connection hole - slit hole
15 Hole of wall for taking out in piping back Φ 100
16 Upward drain pipe connection Φ 60
17 Upward gas pipe connection Φ 36
18 Upward liquid pipe connection Φ 26

3D027538E

6 Dimensional drawing & centre of gravity

6 - 1 Dimensional drawing

FHQ100B

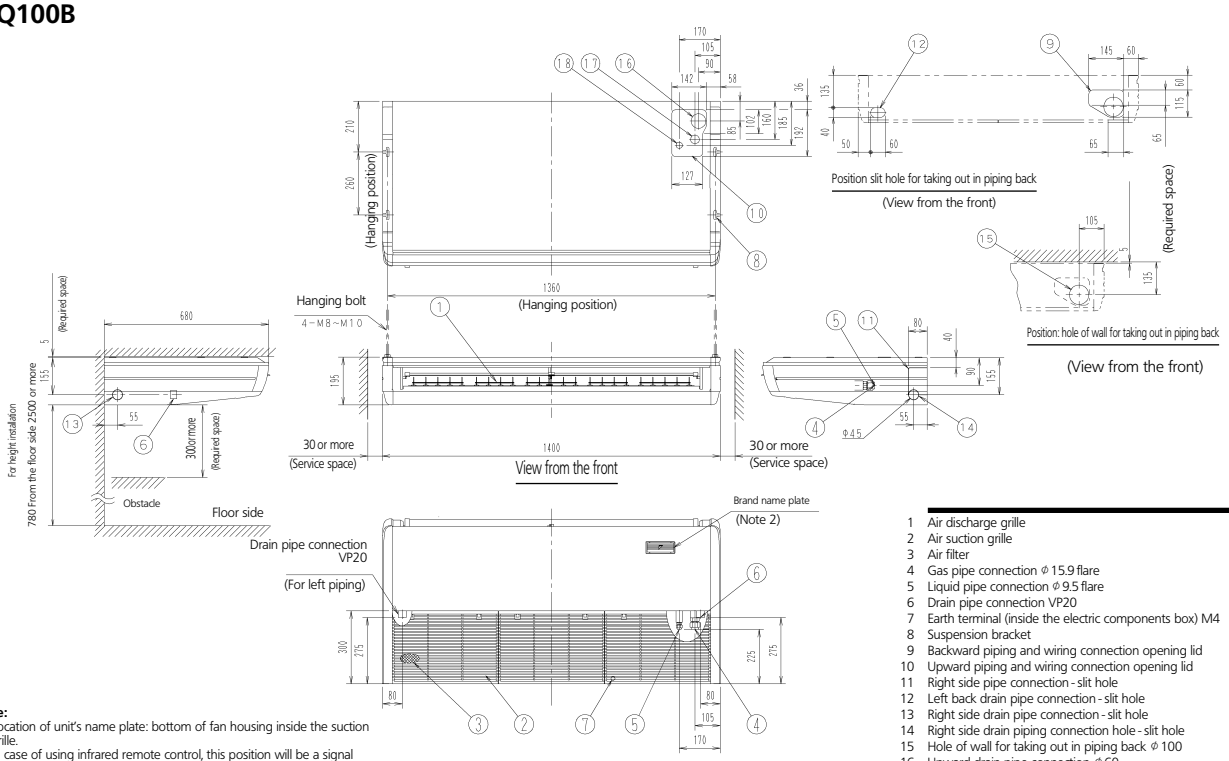

Note:
1. Location of unit's name plate: bottom of fan housing inside the suction grille.
2. In case of using infrared remote control, this position will be a signal receiver. Refer to the drawing of infrared remote control in detail.
3. The remote control code is the standard (about 3m outside the machine) attached.
   (0.5 mm² x 2 Wicks x O.D. Φ5.4)

1 Air discharge grille
2 Air suction grille
3 Air filter
4 Gas pipe connection Φ15.9 flare
5 Liquid pipe connection Φ9.5 flare
6 Drain pipe connection VP20
7 Earth terminal (inside the electric components box) M4
8 Suspension bracket
9 Backward piping and wiring connection opening lid
10 Upward piping and wiring connection opening lid
11 Right side pipe connection - slit hole
12 Left back drain pipe connection - slit hole
13 Right side drain pipe connection - slit hole
14 Right side drain piping connection hole - slit hole
15 Hole of wall for taking out in piping back Φ100
16 Upward drain pipe connection Φ60
17 Upward gas pipe connection Φ36
18 Upward liquid pipe connection Φ26

3D044893A

FHQ125B

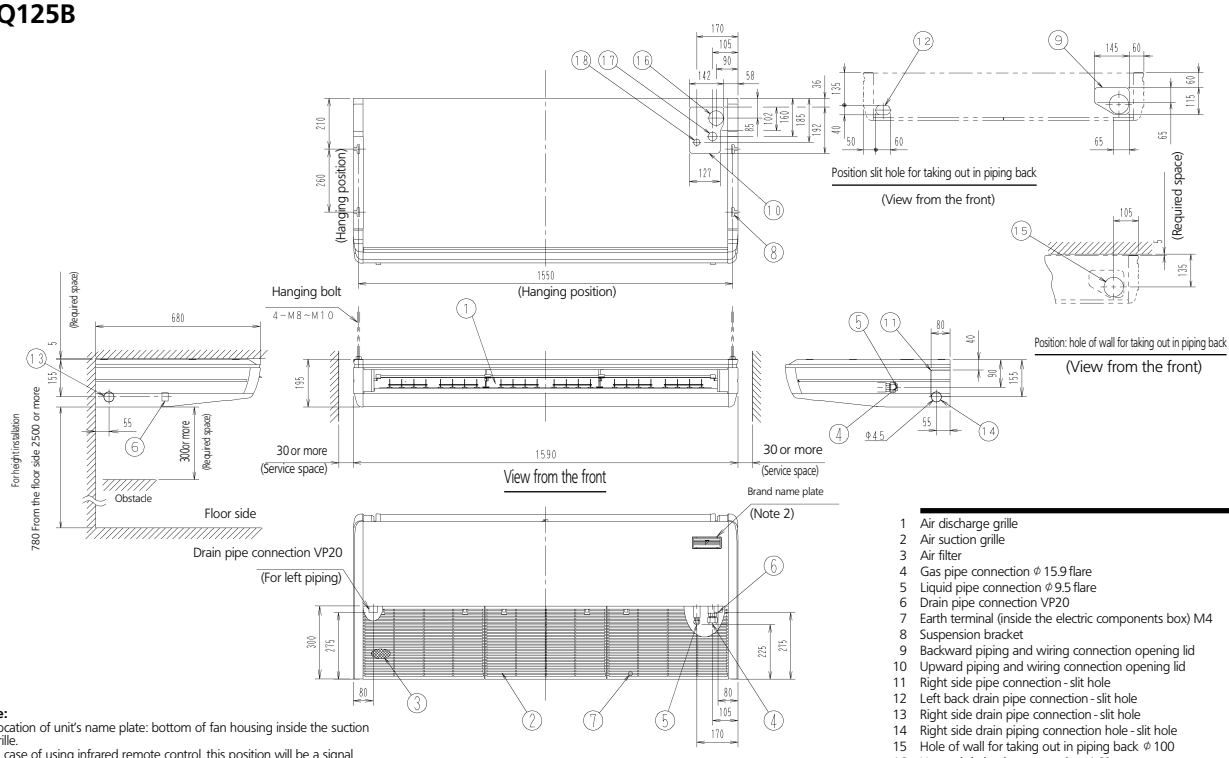

Note:
1. Location of unit's name plate: bottom of fan housing inside the suction grille.
2. In case of using infrared remote control, this position will be a signal receiver. Refer to the drawing of infrared remote control in detail.
3. The remote control code is the standard (about 3m outside the machine) attached.
   (0.5 mm² x 2 Wicks x O.D. Φ5.4)

1 Air discharge grille
2 Air suction grille
3 Air filter
4 Gas pipe connection Φ15.9 flare
5 Liquid pipe connection Φ9.5 flare
6 Drain pipe connection VP20
7 Earth terminal (inside the electric components box) M4
8 Suspension bracket
9 Backward piping and wiring connection opening lid
10 Upward piping and wiring connection opening lid
11 Right side pipe connection - slit hole
12 Left back drain pipe connection - slit hole
13 Right side drain pipe connection - slit hole
14 Right side drain piping connection hole - slit hole
15 Hole of wall for taking out in piping back Φ100
16 Upward drain pipe connection Φ60
17 Upward gas pipe connection Φ36
18 Upward liquid pipe connection Φ26

3D0448963B

7 Piping diagram

FHQ35~125B

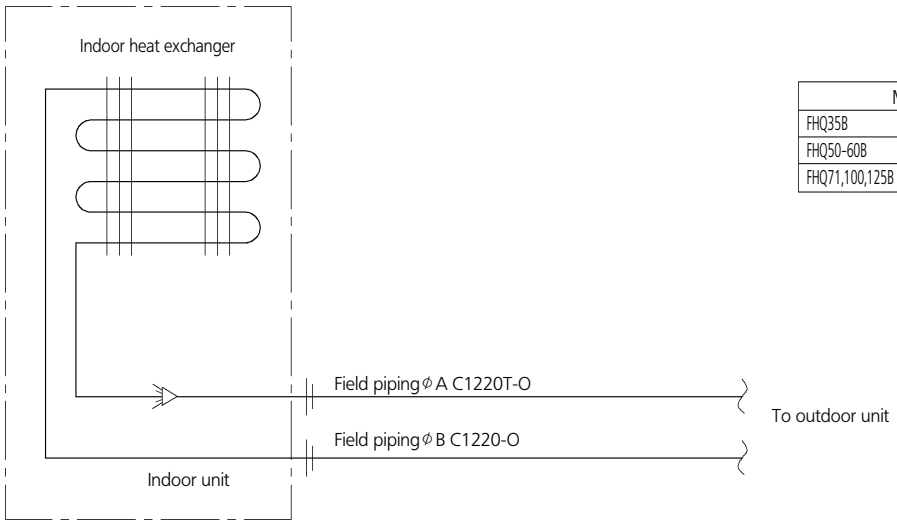

Model	A	B
FHQ35B	6.4	9.5
FHQ50-60B	6.4	12.7
FHQ71,100,125B	9.5	15.9

Check valve Flare connection Screw connection Flange connection Pinched pipe Spinned pipe

4D037995F

8 Wiring diagram

8 - 1 Wiring diagram

FHQ35~60B

Notes

1. ▭▭ : Terminal ▭, ⫼ : Connector
   ⏚ : Protective earth (screw)
2. — — — : Field wiring
3. In case using central remote control, connect it to the unit in accordance with the attached instruction manual.
4. X24A is connected when the infrared remote control kit is being used.
5. Remote control model varies according to the combination system, confirm technical materials and catalogs, etc. before connecting.
6. In case installing the drain pump (M1P), remove the jumper connector of X15A and execute the additional wiring for float switch and drain pump.
7. Symbols show as follows Red:red, Blk:black, Ylw:yellow, Org:orange, Gry:gray, Prp:purple, Blu:blue

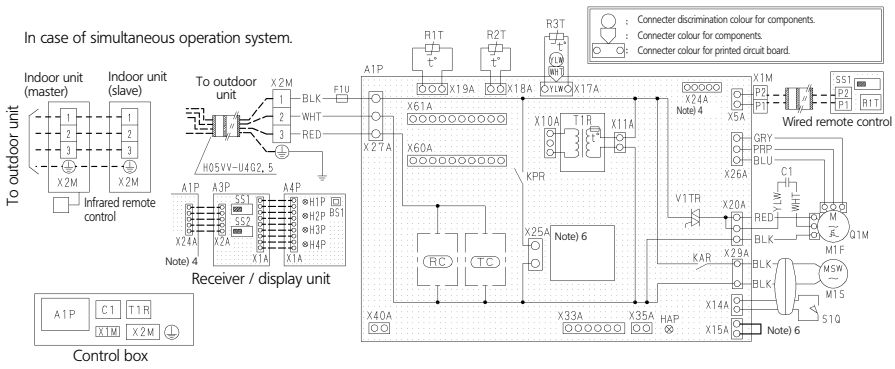
In case of simultaneous operation system.
Indoor unit (master)
Indoor unit (slave)
To outdoor unit
To outdoor unit
Infrared remote control
Receiver / display unit
Control box
Wired remote control
: Connecter discrimination colour for components.
: Connecter colour for components.
: Connecter colour for printed circuit board.

1-RED, 2-WHITE, 3-BLACK	
A1P	Printed circuit board
C1R	Capacitor (M1F)
F1U	Fuse(F5A 250V)
HAP	Light emitting diode (service monitor green)
KAR	Magnetic relay (M1S)
KPR	Magnetic relay (M1P)
M1S	Motor (swing flap)
M1F	Motor (indoor fan)
Q1M	Thermo switch (M1F embedded)
R1T	Thermistor (air)
R2T	Thermistor (coil)1
R3T	Thermistor (coil)2

S1Q	Limit switch (swing flap)
T1R	Transformer(220-240V/22V)
V1TR	Phase control circuit
X1M	Terminal block
X2M	Terminal block
(RC)	Signal receiver circuit
(TC)	Signal transmission circuit
Wired remote control	
R1T	Thermistor (air)
SS1	Selector switch (main/sub)

Infrared remote control	
Receiver / display unit	
A3P	Printed circuit board
A4P	Printed circuit board
BS1	Push button (on/off)
H1P	Light emitting diode (service monitor red)
H2P	Light emitting diode (service monitor green)
H3P	Light emitting diode (service monitor red)
H4P	Light emitting diode (service monitor orange)
SS1	Selector switch (main/sub)
SS2	Selector switch (wireless address set)

Connector for optional parts	
X15A	Connector (float switch)
X25A	Connector (drain pump)
X33A	Connector (adapter for wiring)
X35A	Connector (group control adapter)
X40A	Connector (ON/OFF input from outside)
X60A	Connector (interface adapter for sky air series)
X61A	

3D037842D

FHQ71,100,125B

Notes

1. ▭▭ : Terminal ▭, ⫼ : Connector
   ⏚ : Protective earth (screw)
2. ⫼ : Field wiring
3. In case using central remote control, connect it to the unit in accordance with the attached instruction manual.
4. X24A is connected when the infrared remote control kit is being used.
5. Remote control model varies according to the combination system, confirm technical materials and catalogs, etc. before connecting.
6. In case installing the drain pump (M1P), remove the jumper connector of X15A and execute the additional wiring for float switch and drain pump.
7. Symbols show as follows Red:red, Blk:black, Ylw:yellow, Org:orange, Gry:gray, Prp:purple, Blu:blue

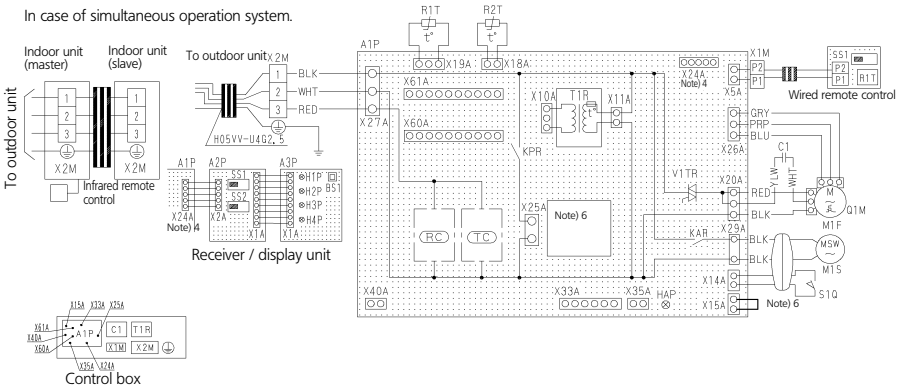

1-RED, 2-WHITE, 3-BLACK	
A1P	Printed circuit board
C1R	Capacitor (M1F)
HAP	Light emitting diode (service monitor green)
KAR	Magnetic relay (M1S)
KPR	Magnetic relay (M1P)
M1S	Motor (swing flap)
M1F	Motor (indoor fan)
Q1M	Thermo switch (M1F embedded)
R1T	Thermistor (air)
R2T	Thermistor (coil)

S1Q	Limit switch (swing flap)
T1R	Transformer(220-240V/22V)
V1TR	Phase control circuit
X1M	Terminal block
X2M	Terminal block
(RC)	Signal receiver circuit
(TC)	Signal transmission circuit
Wired remote control	
R1T	Thermistor (air)
SS1	Selector switch (main/sub)

Infrared remote control	
Receiver / display unit	
A2P	Printed circuit board
A3P	Printed circuit board
BS1	Push button (on/off)
H1P	Light emitting diode (service monitor red)
H2P	Light emitting diode (service monitor green)
H3P	Light emitting diode (service monitor red)
H4P	Light emitting diode (service monitor orange)
SS1	Selector switch (main/sub)
SS2	Selector switch (wireless address set)

Connector for optional parts	
X15A	Connector (float switch)
X25A	Connector (drain pump)
X33A	Connector (adapter for wiring)
X35A	Connector (group control adapter)
X40A	Connector (ON/OFF input from outside)
X60A	Connector (interface adapter for sky air series)
X61A	

4D043825B

8 Wiring diagram

8 - 2 External connection diagram

NOTES

1 ——— Line voltage wiring
——— Control circuit wiring
2 All wiring, components and materials to be produced on the site must comply with the applicable local and national codes.
3 Use copper conductors only.
4 See wiring diagrams for details.
5 Install fuse and mainswitch for safety.
6 All field wiring and components must be provided by a licensed electrician.
7 The unit shall be grounded in compilance with the applicable local and national codes.
8 Wiring shown are general points-of-connection guides only and are not intended for or to include all details for a specific installation.
9 Never share a common power supply with other equipment.

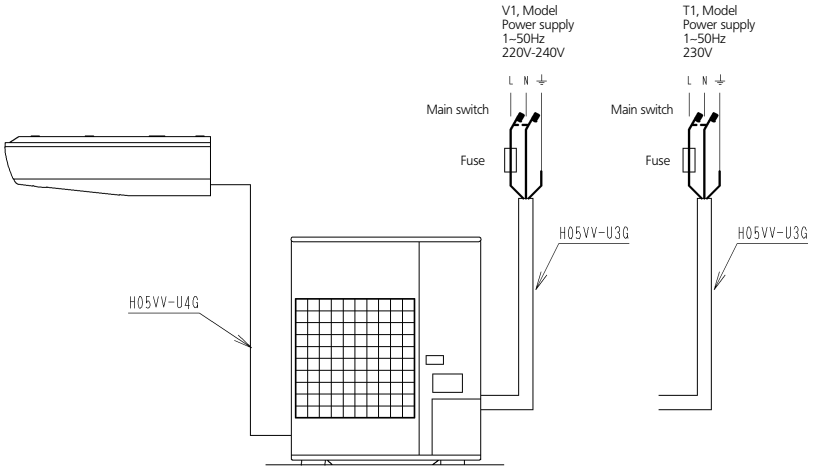

9 Sound data

9 - 1 Sound level data

Model	Sound pressure level			Sound power level	
	230V		Measuring location		
	50Hz				
	H (cooling/heating)	L (cooling/heating)		H (cooling/heating)	L (cooling/heating)
FHQ35B	37/37	32/32	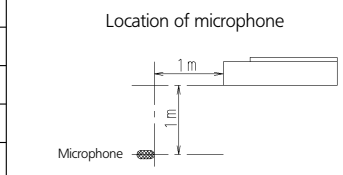	53/53	48/48
FHQ50B	38/38	33/33		54/54	49/49
FHQ60B	39/-	33/-		55/-	49/-
FHQ71B	39/39	35/35		55/55	51/51
FHQ100B	42/42	37/37		58/58	53/53
FHQ125B	44/44	39/39		60/60	55/55

9 Sound data

9 - 2 Sound pressure spectrum

FHQ35B

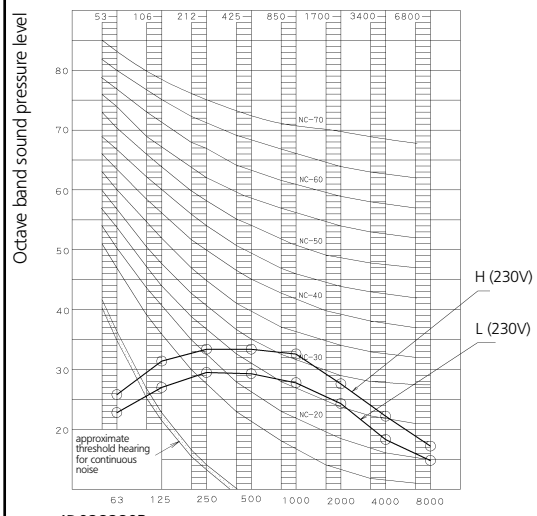

4D028280B

NOTES

1 Sound pressure levels are measured in an anechoic room.
2 Operation sound levels are valid at nominal operation condition
3 Operation sound level differs with operation and ambient conditions.

FHQ50B

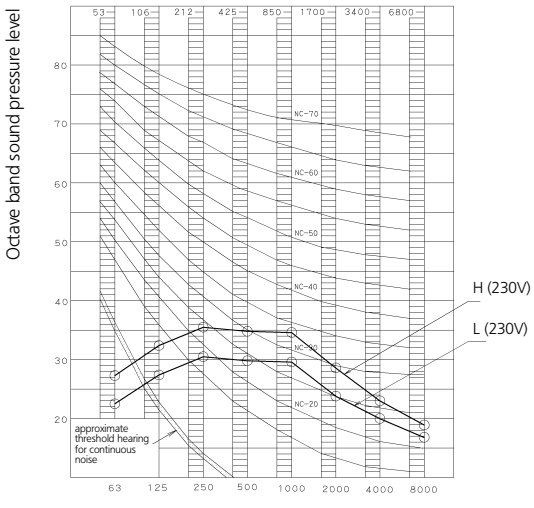

4D028281B

NOTES

1 Sound pressure levels are measured in an anechoic room.
2 Operation sound levels are valid at nominal operation condition
3 Operation sound level differs with operation and ambient conditions.

FHQ60B

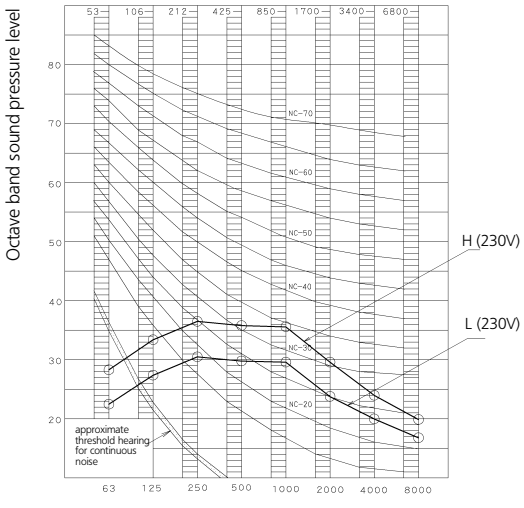

4D037997A

NOTES

1 Sound pressure levels are measured in an anechoic room.
2 Operation sound levels are valid at nominal operation condition
3 Operation sound level differs with operation and ambient conditions.

FHQ71B

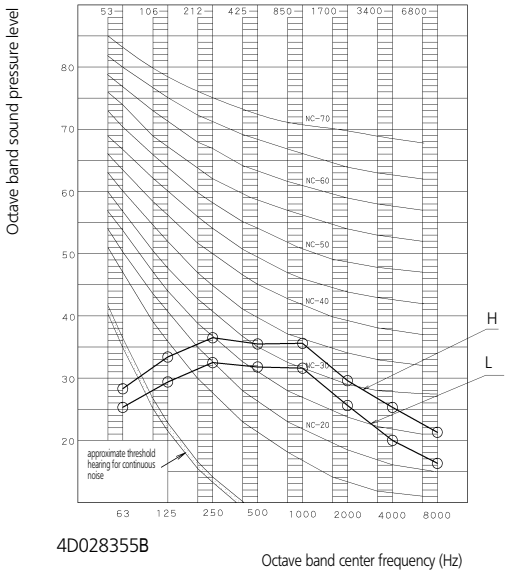

4D028355B

NOTES

1 Operation sound is measured in an anechoic chamber.
2 Operation sound level differs with operation and ambient conditions.
3 Sound levels are valid at nominal operation conditions.

9 Sound data

9 - 2 Sound pressure spectrum

FHQ100B

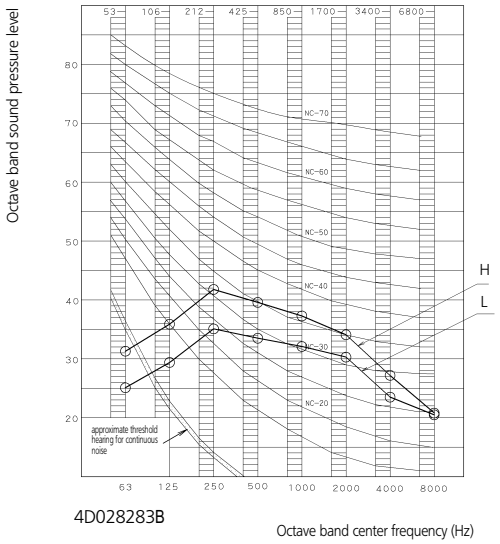

4D028283B

NOTES

1 Operation sound is measured in an anechoic chamber.

2 Operation sound level differs with operation and ambient conditions.

3 Sound levels are valid at nominal operation conditions.

FHQ125B

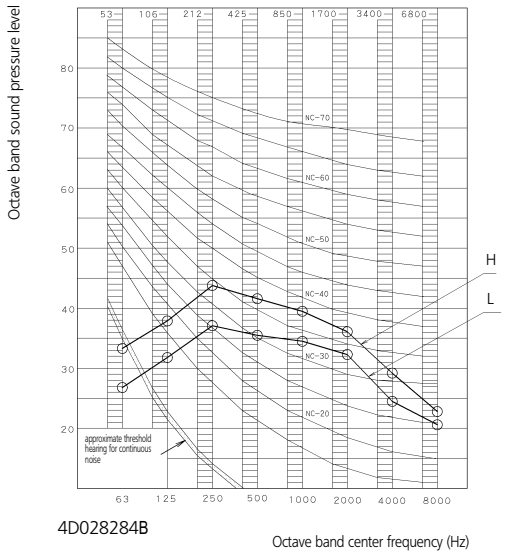

4D028284B

NOTES

1 Operation sound is measured in an anechoic chamber.

2 Operation sound level differs with operation and ambient conditions.

3 Sound levels are valid at nominal operation conditions.

10 Air flow pattern

FHQ35~50B

Cooling - air velocity distribution

Air flow direction: horizontal

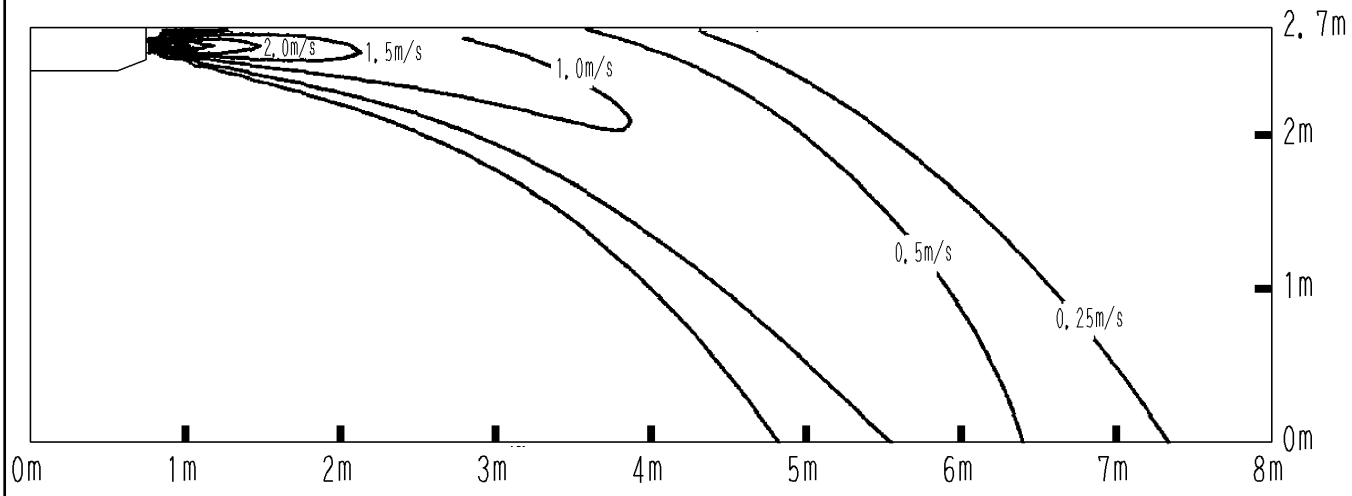

FHQ35~50B

Cooling - air temperature distribution

Air flow direction: horizontal

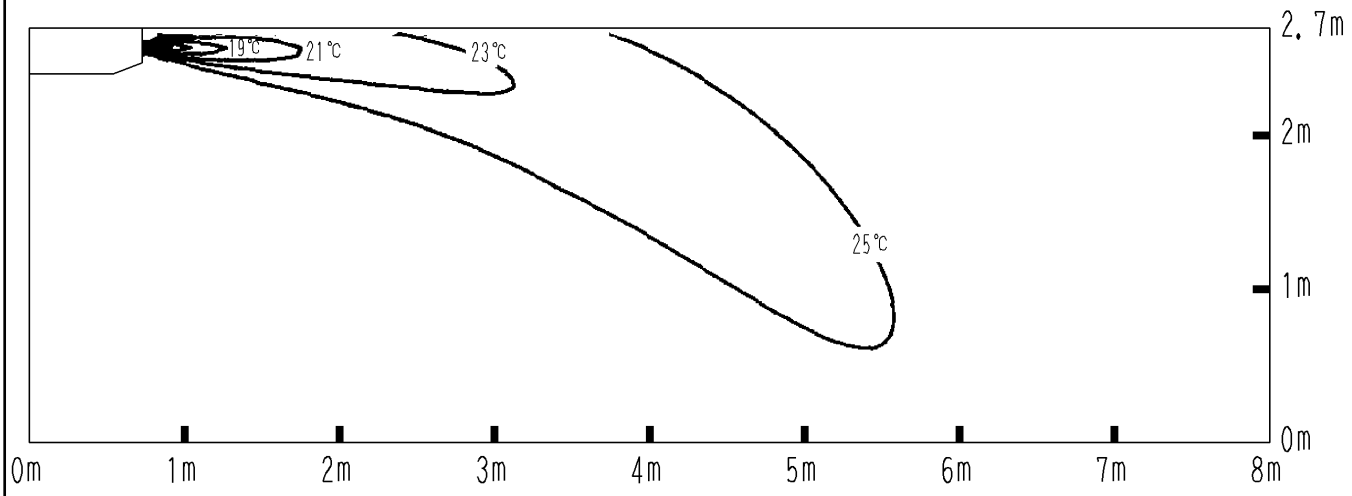

4D028550

10 Air flow pattern

FHQ60-71B

Cooling - air velocity distribution

Air flow direction: horizontal

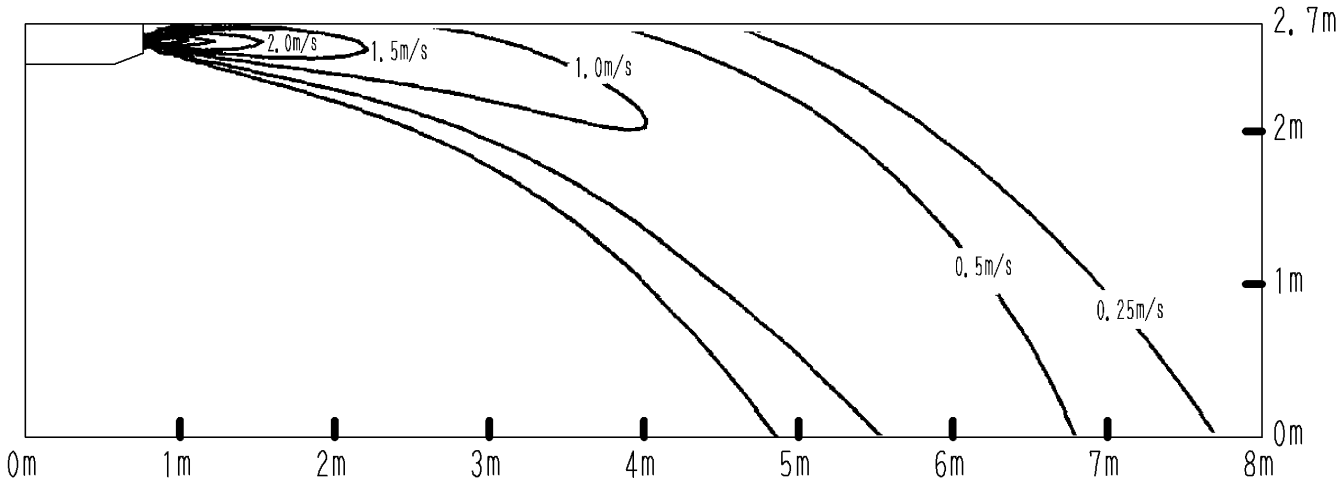

FHQ60-71B

Cooling - air temperature distribution

Air flow direction: horizontal

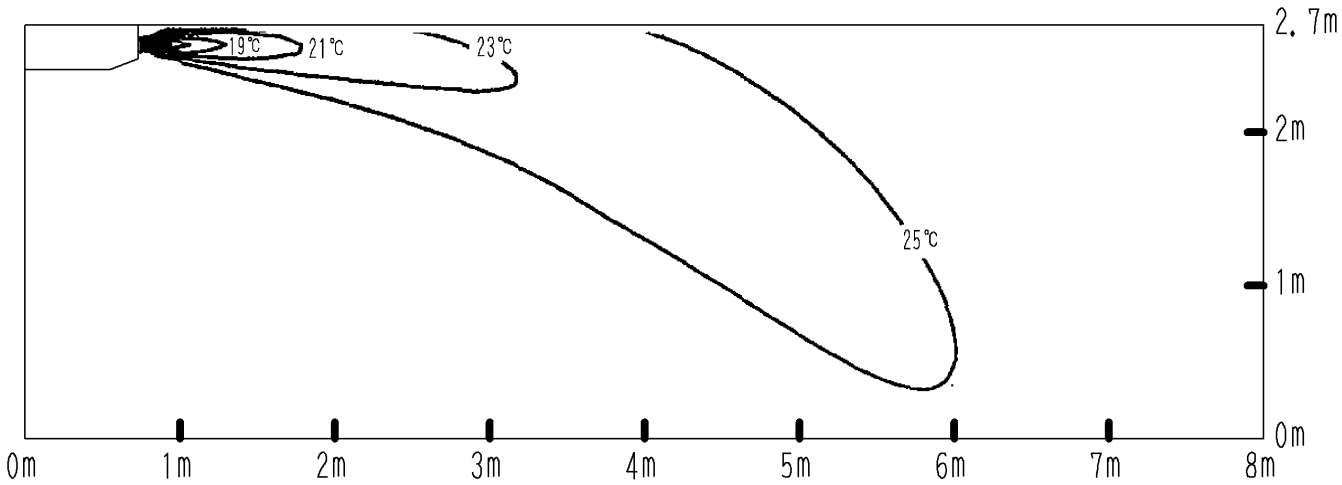

4D028551B

10 Air flow pattern

FHQ100B

Cooling - air velocity distribution

Air flow direction: horizontal

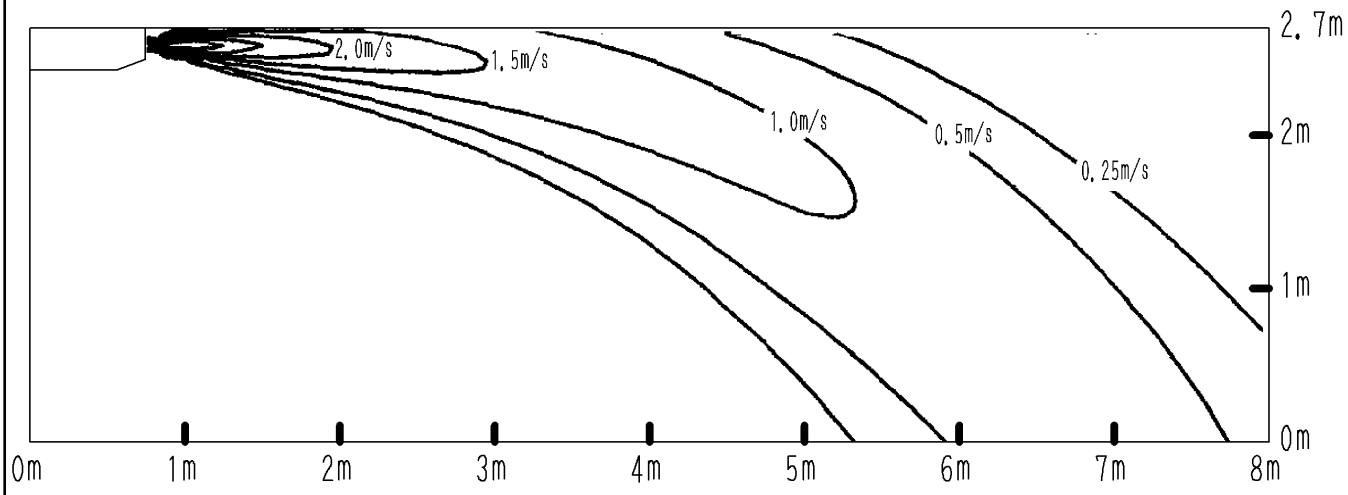

FHQ100B

Cooling - air temperature distribution

Air flow direction: horizontal

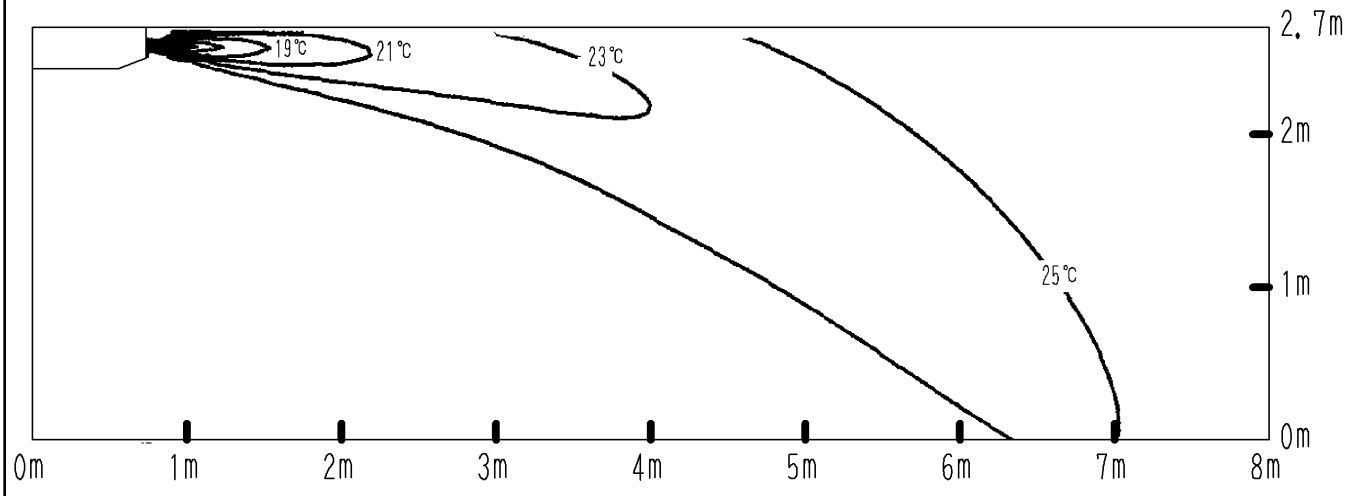

4D028552B

10 Air flow pattern

FHQ125B

Cooling - air velocity distribution

Air flow direction: horizontal

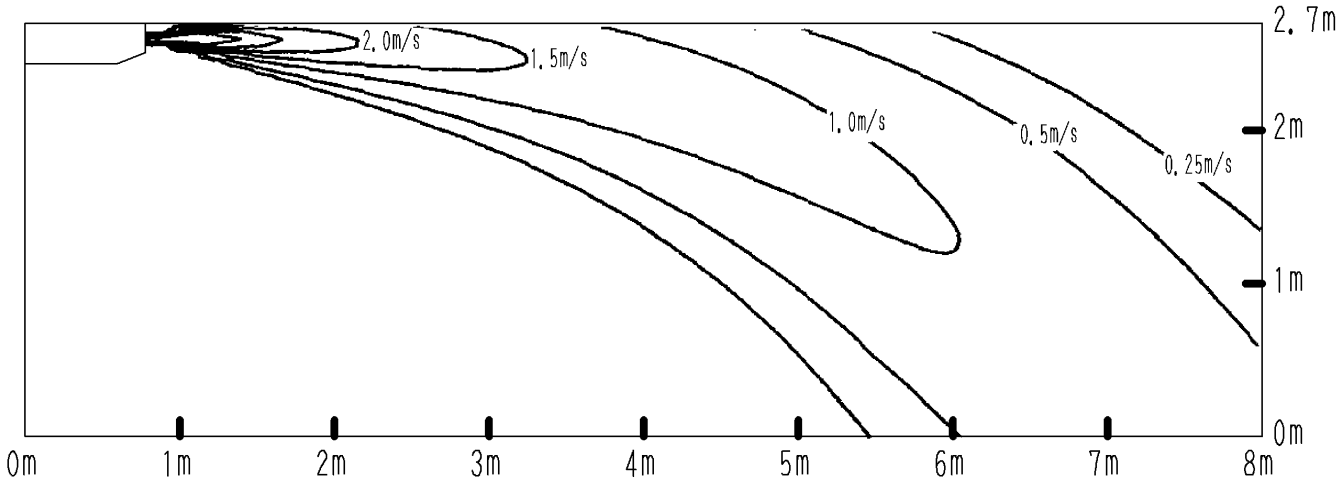

FHQ125B

Cooling - air temperature distribution

Air flow direction: horizontal

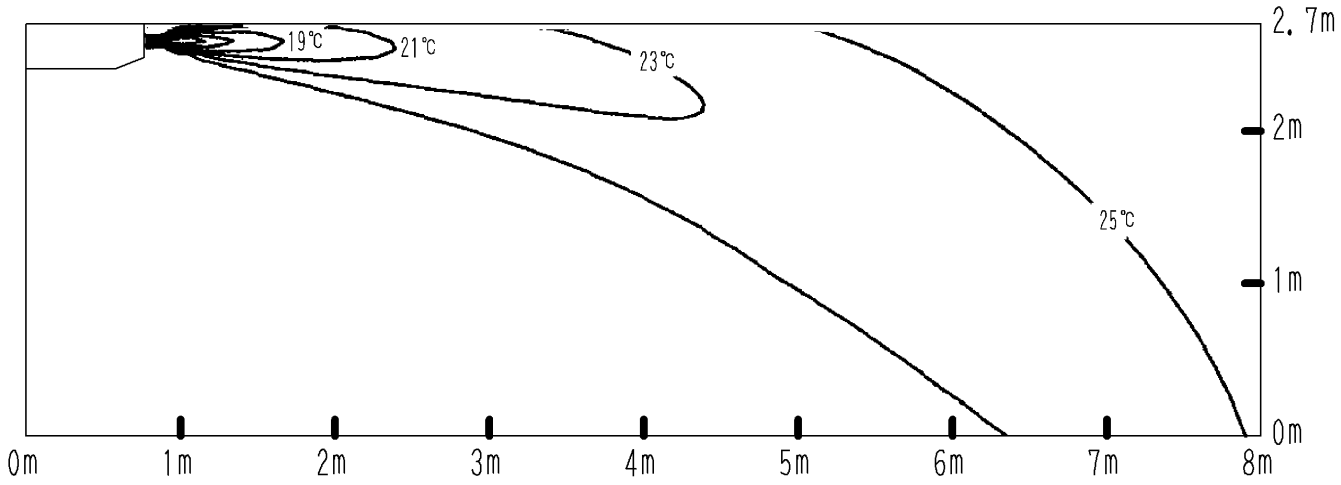

4D028553B

10 Air flow pattern

FHQ35~50B

Heating - air velocity distribution

Air flow direction: 45° (downward)

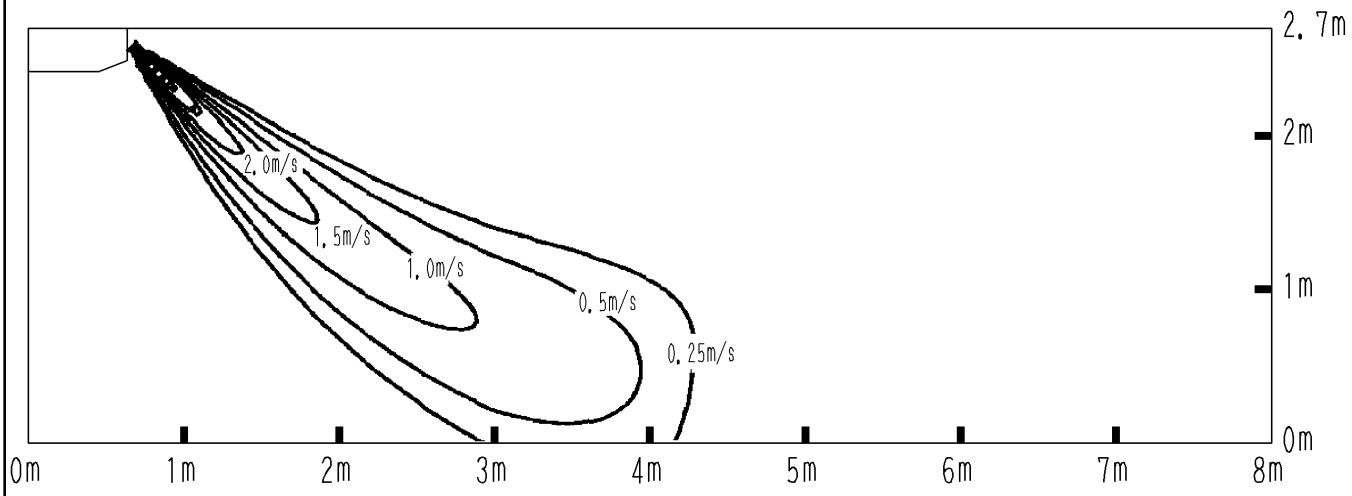

FHQ35~50B

Heating - air temperature distribution

Air flow direction: 45° (downward)

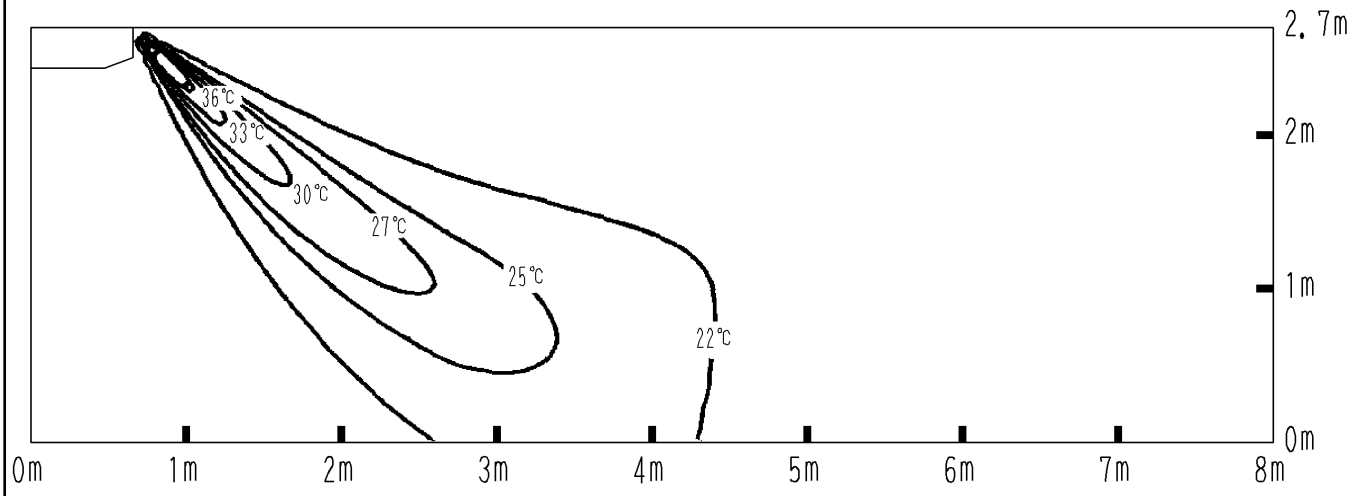

4D028554

10 Air flow pattern

FHQ60-71B

Heating - air velocity distribution

Air flow direction: 45° (downward)

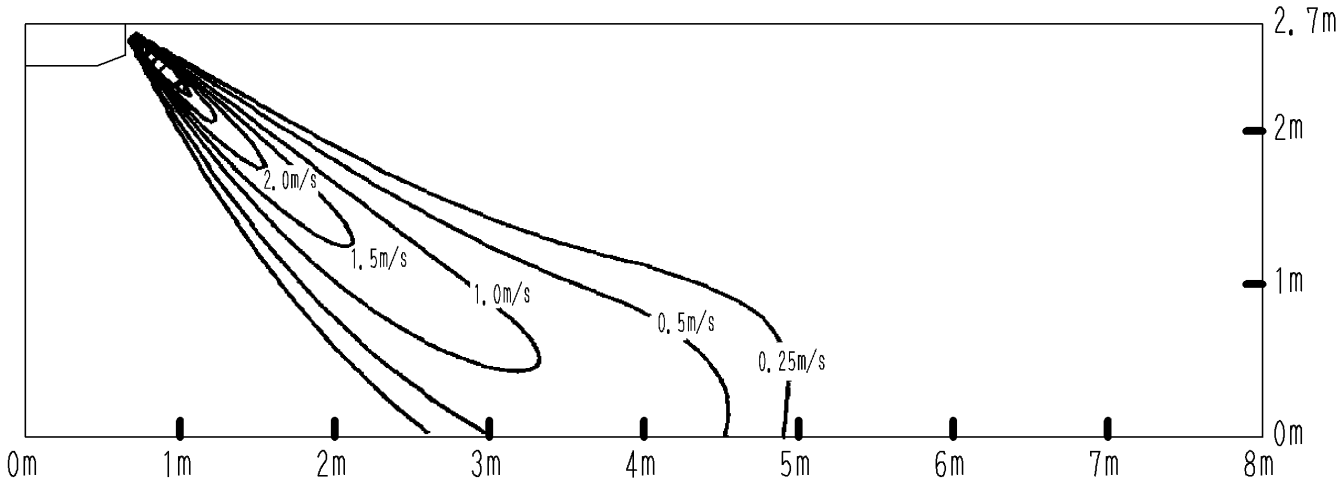

FHQ60-71B

Heating - air temperature distribution

Air flow direction: 45° (downward)

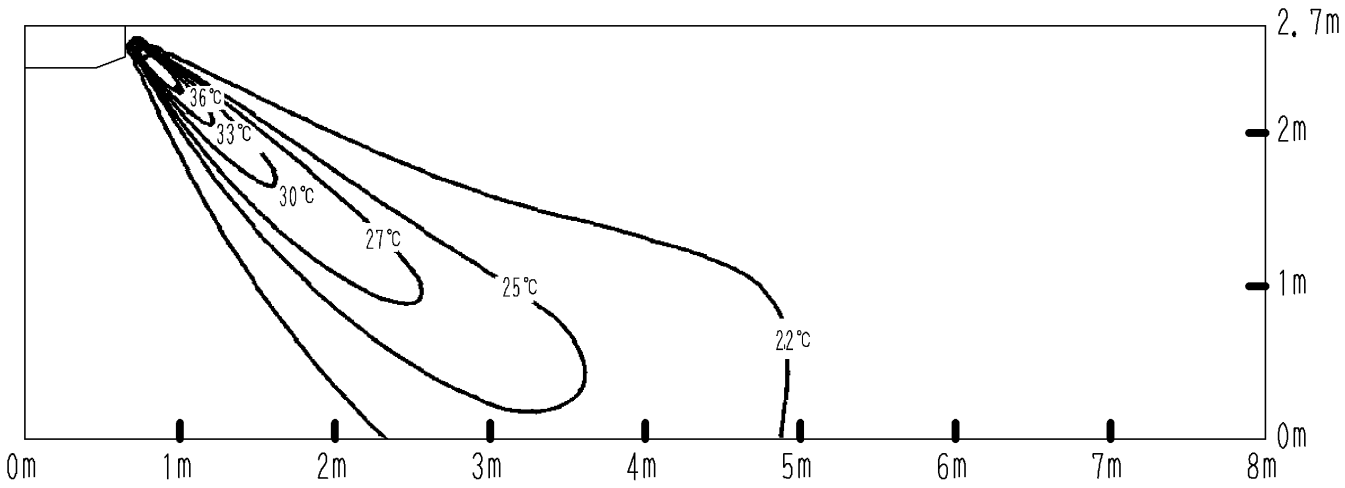

4D028555B

10 Air flow pattern

FHQ100B

Heating - air velocity distribution

Air flow direction: 45° (downward)

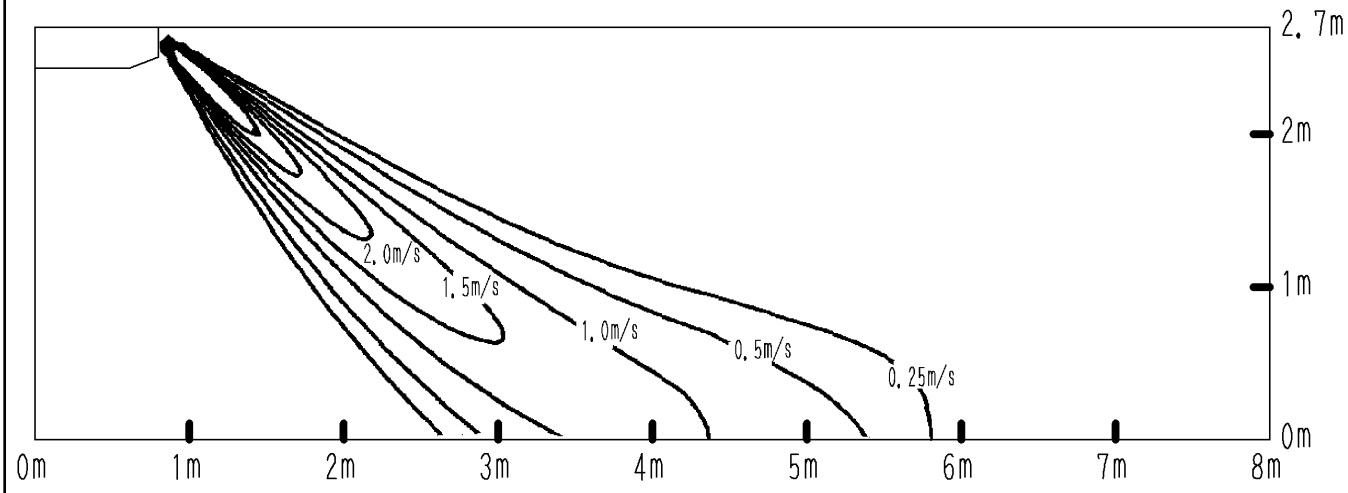

FHQ100B

Heating - air temperature distribution

Air flow direction: 45° (downward)

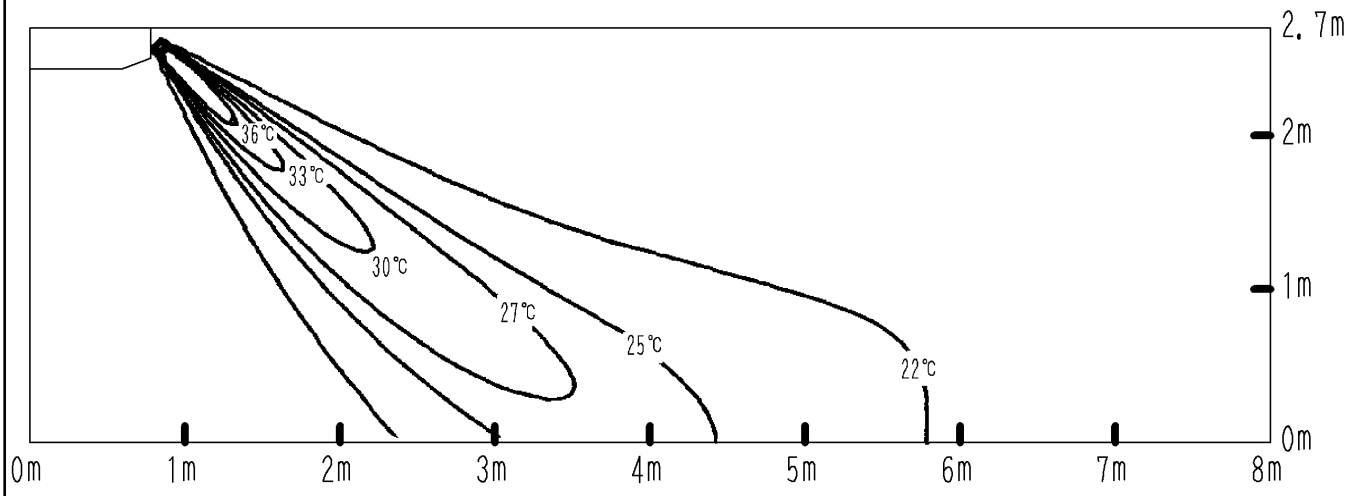

4D028556B

10 Air flow pattern

FHQ125B

Heating - air velocity distribution

Air flow direction: 45° (downward)

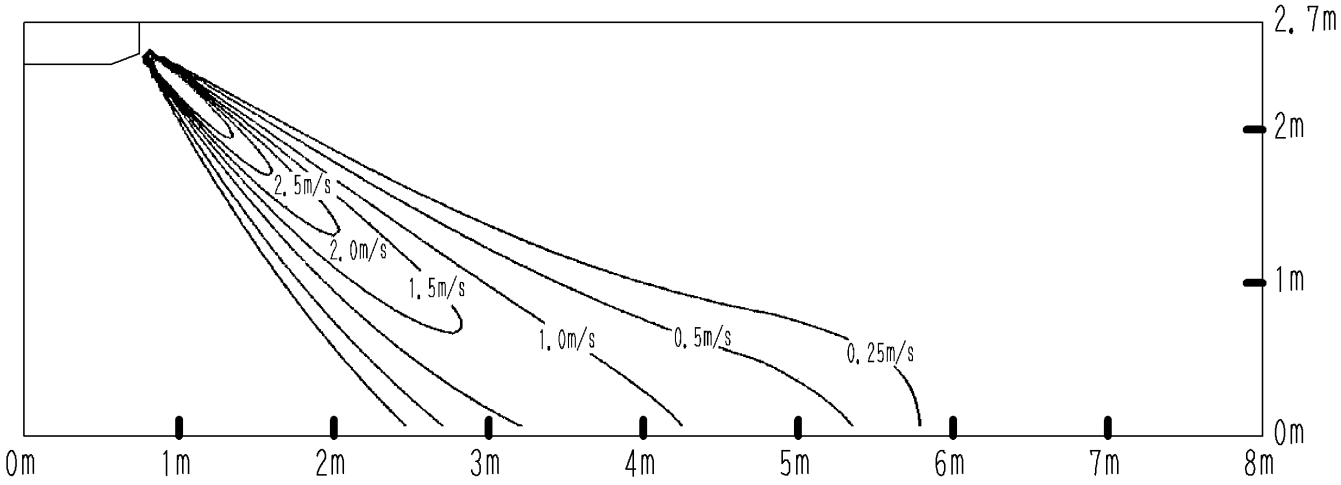

FHQ125B

Heating - air temperature distribution

Air flow direction: 45° (downward)

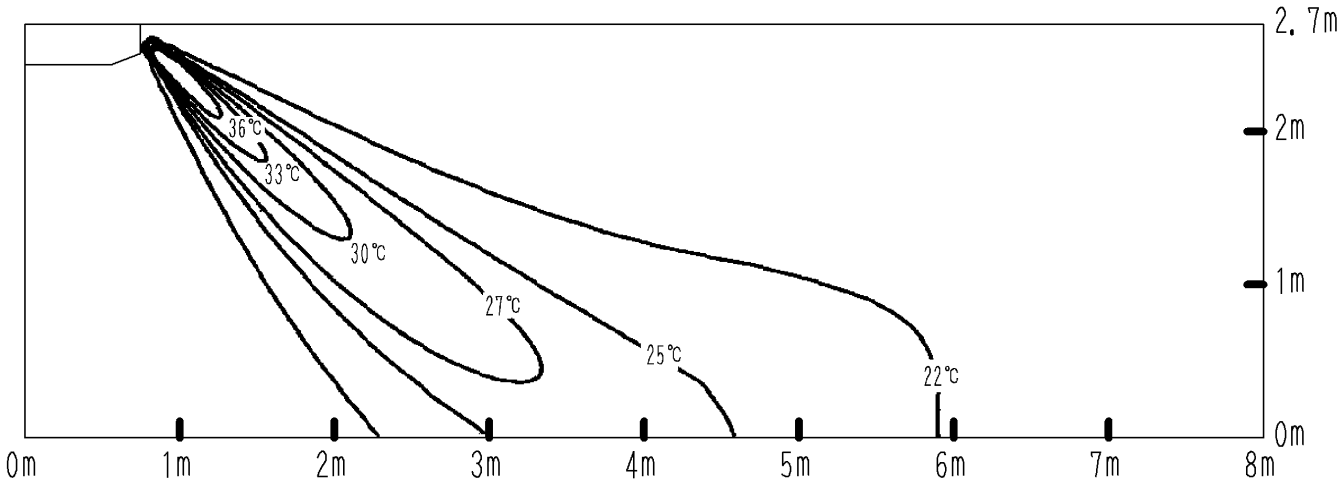

4D028557B